

[vc_row row_type="row" use_row_as_full_screen_section="no" type="full_width" angled_section="no" text_align="left" background_image_as_pattern="without_pattern" css_animation=""][vc_column][vc_column_text css=".vc_custom_1477159456296{padding-bottom: 15px !important;}"]The shutter release cable connects to your DSLR and to the SlideSnap Pro's control panel. It allows the control panel to speak with your camera by sending focus / capture commands.

The SlideSnap Pro ships with the two most common shutter release cables; N3 and C1. Refer to the information below to make sure the correct cable is supplied with your unit. This is not an exhaustive list because new camera models are constantly being introduced, refer to your manual or contact us if unsure.[vc_column_text][vc_text_separator title="Common Cables" border="no"][/vc_column][vc_row][vc_row row_type="row" use_row_as_full_screen_section="no" type="full_width" angled_section="no" text_align="left" background_image_as_pattern="without_pattern" css_animation=""]css=".vc_custom_1477159900259{padding-top: 10px !important;padding-right: 10px !important;padding-bottom: 10px !important;padding-left: 10px !important;background-color: #f9f9f9 !important;border-radius: 10px !important;}"[vc_column width="1/3"][vc_single_image image="2882" alignment="center" style="vc_box_shadow_border_circle" onclick="link_image" qode_css_animation=""]title="Nikon N1"[vc_column_text css=".vc_custom_1477159776945{padding-top: 10px !important;}"]**Nikon** D800E, D800, D700, D300s, D300, D200, D4, D3S, D3X, D3, D2Xs, D2X, D1X, D2Hs,D2H, D1H, D1, F100, N90s, F90X, F5, F6, F90.

Fujifilm S5 Pro, S3 Pro.

Kodak DCS-14n.[vc_column_text][vc_column][vc_column width="1/3"][vc_single_image image="2883" alignment="center" style="vc_box_shadow_border_circle" onclick="link_image" qode_css_animation=""]title="Nikon N2"[vc_column_text css=".vc_custom_1477159243405{padding-top: 10px !important;}"]

- **Nikon** D80, D70s.

[vc_column_text][vc_column][vc_column width="1/3"][vc_single_image image="2885" alignment="center" style="vc_box_shadow_border_circle" onclick="link_image" qode_css_animation=""]title="Nikon N3"[vc_column_text css=".vc_custom_1477159227569{padding-top: 10px !important;}"]**Nikon** D7100,D7000, D5300, D5100, D5000, D3200, D3100, D600, D90.[vc_column_text][vc_column][vc_row][vc_row row_type="row" use_row_as_full_screen_section="no" type="full_width" angled_section="no" text_align="left" background_image_as_pattern="without_pattern" css_animation=""]css=".vc_custom_1477159918361{padding-top: 10px !important;padding-right: 10px !important;padding-bottom: 10px !important;padding-left: 10px !important;background-color: #f9f9f9 !important;border-radius: 10px !important;}"[vc_column width="1/3" css=".vc_custom_1477159192286{padding-top: 10px !important;}"][/vc_single_image image="2880" alignment="center" style="vc_box_shadow_border_circle" onclick="link_image" qode_css_animation=""]title="Canon C1"[vc_column_text css=".vc_custom_1477159793770{padding-top: 10px !important;}"]**Canon EOS** 1100D(Rebel T3), 1000D (Digital Rebel XS), 650D(T4i), 600D(T3i), 550D(T2i), 500D (Digital Rebel T1i), 450D (Digital Rebel XSi), 400D (Digital Rebel Xti), 350D(Digital Rebel XT), 300D (Digital Rebel), 300V, 300, 60D, 60Da, 50E, 50, 33, 30, 3000...etc.

Canon Powershot G12, G11, G10, G1X.

Pentax K200, K110D Super, K110D, K100D, K20D, K10D, K-7, K-5, Kr, Kx, *istDS2, *istDS, *istD, *ist, MZ-6, MZ-L, ZX-L.

Contax N Digital, NX, N1, 645.

Samsung GX-10, GX 1L, GX 1S.[vc_column_text][vc_column][vc_column width="1/3"][vc_single_image image="2884"

alignment="center" style="vc_box_shadow_border_circle" onclick="link_image" qode_css_animation="" title="Canon C2"]
 [vc_column_text css=".vc_custom_1477159250181{padding-top: 10px !important;}"]
 Canon EOS 1D X, 1D Mark IV, 1D(s) Mark III, 1D Mark III, 1D(s) Mark II, 1D Mark II, 1D Mark II(N), 1D C, 1Ds, 1D, 1V, 5D Mark III, 5D Mark II, 50D, 7D, 6D, 5D, 40D, 30D, 20D, 10D, EOS 3, D2000.
 [vc_column_text][vc_column][vc_column width="1/3"]
 [vc_single_image image="2881" alignment="center" style="vc_box_shadow_border_circle" onclick="link_image" qode_css_animation="" title="Sony S1"]
 [vc_column_text css=".vc_custom_1477159798981{padding-top: 10px !important;}"]
 Sony A900, A850, A700, A580, A560, A550, A500, A450, A350, A300, A200, A99, A77, A65, A55, A35, A33.
 [vc_column_text][vc_column][vc_row][vc_row row_type="row" use_row_as_full_screen_section="no" type="full_width" angled_section="no" text_align="left" background_image_as_pattern="without_pattern" css_animation="" css=".vc_custom_1477159918361{padding-top: 10px !important;padding-right: 10px !important;padding-bottom: 10px !important;padding-left: 10px !important;background-color: #fcfcfc !important;border-radius: 10px !important;}"]
 [vc_column width="1/3" css=".vc_custom_1477159192286{padding-top: 10px !important;}"]
 [vc_single_image image="120336" alignment="center" style="vc_box_shadow_border_circle" onclick="link_image" qode_css_animation="" title="Sony Multi"]
 [vc_column_text css=".vc_custom_1501165356131{padding-top: 10px !important;}"]
 Sony DSC-HX300, DSC-HX50V, DSC-RX100M2, NEX-3NL, SLT-A57, SLT-A58, DSC-RX100M2, NEX-3NL, Alpha a7, Alpha 7R, Alpha A5000, Alpha A5100, Alpha A6000, Alpha A6300, Alpha A3000, HDR-CX220, HDR-CX230, HDR-CX290, HDR-CX380, HDR-CX430V, HDR-PJ230, HDR-PJ380, HDR-PJ430V, HDR-PJ650V, HDR-PJ790V

[/vc_column_text][/vc_column][/vc_row]